
OPERATOR & MAINTENANCE INSTRUCTIONS

FOR THE

MICROFLY[®] II SERIES

GUIDED PRECISION AERIAL DELIVERY

SYSTEMS



WARNING: This document may contain technical data whose export is restricted by the Arms Export Control Act (Title 22, U.S.C., Sec 2751, et seq.) or the Export Administration Act of 1979, as amended, Title 50, U.S.C., App. 2401 et seq. Violations of these export laws are subject to severe criminal penalties. Disseminate in accordance with provisions of DoD Directive 5230.25.

DESTRUCTION NOTICE: Destroy by any method that would prevent Disclosure of content or reconstructions of the document.

© COPYRIGHT NOTICE

This MicroFly® II Series Guided Precision Aerial Delivery Systems technical manual is protected by U.S. and International copyright laws. Reproduction and distribution of the information within this technical manual without written permission from Airborne Systems North America Inc. is prohibited.

RECORD OF CHANGES

Go to <https://airborne-sys.com/riggers-corner/> to see if your technical manual is the most current by searching for the manual and reviewing the record of changes page. Some revisions may not require a new manual. Contact your Airborne Systems sales associate for assistance in getting an updated technical manual.

CHANGE NO.	DATE	TITLE OR BRIEF DESCRIPTION	ENTERED BY
Original Issue 1	20 December 2018	MicroFly® II Series Guided Precision Aerial Delivery Systems Operator & Maintenance Instructions. (Combined all the MicroFly® II manuals into one TM).	Kenneth W. George
Issue 2	7 March 2019	Minor changes to the assembly, packing, and rigging procedures. Added JAI form.	Kenneth W. George

INTENTIONALLY BLANK