
OPERATOR & MAINTENANCE INSTRUCTIONS

RA-360-CH

ADVANCED RAM AIR PARACHUTE SYSTEM

886500-0



WARNING: This document may contain technical data whose export is restricted by the Arms Export Control Act (Title 22, U.S.C., Sec 2751, et seq.) or the Export Administration Act of 1979, as amended, Title 50, U.S.C., App. 2401 et seq. Violations of these export laws are subject to severe criminal penalties. Disseminate in accordance with provisions of DoD Directive 5230.25.

DESTRUCTION NOTICE: Destroy by any method that would prevent Disclosure of content or reconstructions of the document.

© COPYRIGHT NOTICE

This RA-360-CH Advanced Ram Air Parachute System technical manual is protected by U.S. and International copyright laws. Reproduction and distribution of the information within this technical manual without written permission from Airborne Systems North America Inc. is prohibited.

RECORD OF CHANGES

CHANGE NO.	DATE	TITLE OR BRIEF DESCRIPTION	ENTERED BY
Original Issue 1	12 June 2017	RA-360-CH Advanced Ram Air Parachute System Operator and Maintenance Manual 832900-0	Oliver K. Frazier
Issue 2	6 August 2018	Removed procedure for installing main ripcord in DBSL packing procedures. Added copyright information. Updated the illustrated parts list.	Kenneth W George

INTENTIONALLY BLANK