



WHERE TECHNOLOGY » *TAKES FLIGHT*

Accuracy Techniques

Glide Modulation






Overview


Avoid S-turns in the pattern

Use glide modulation for accuracy

● ● ● Observation: S-turns in pattern

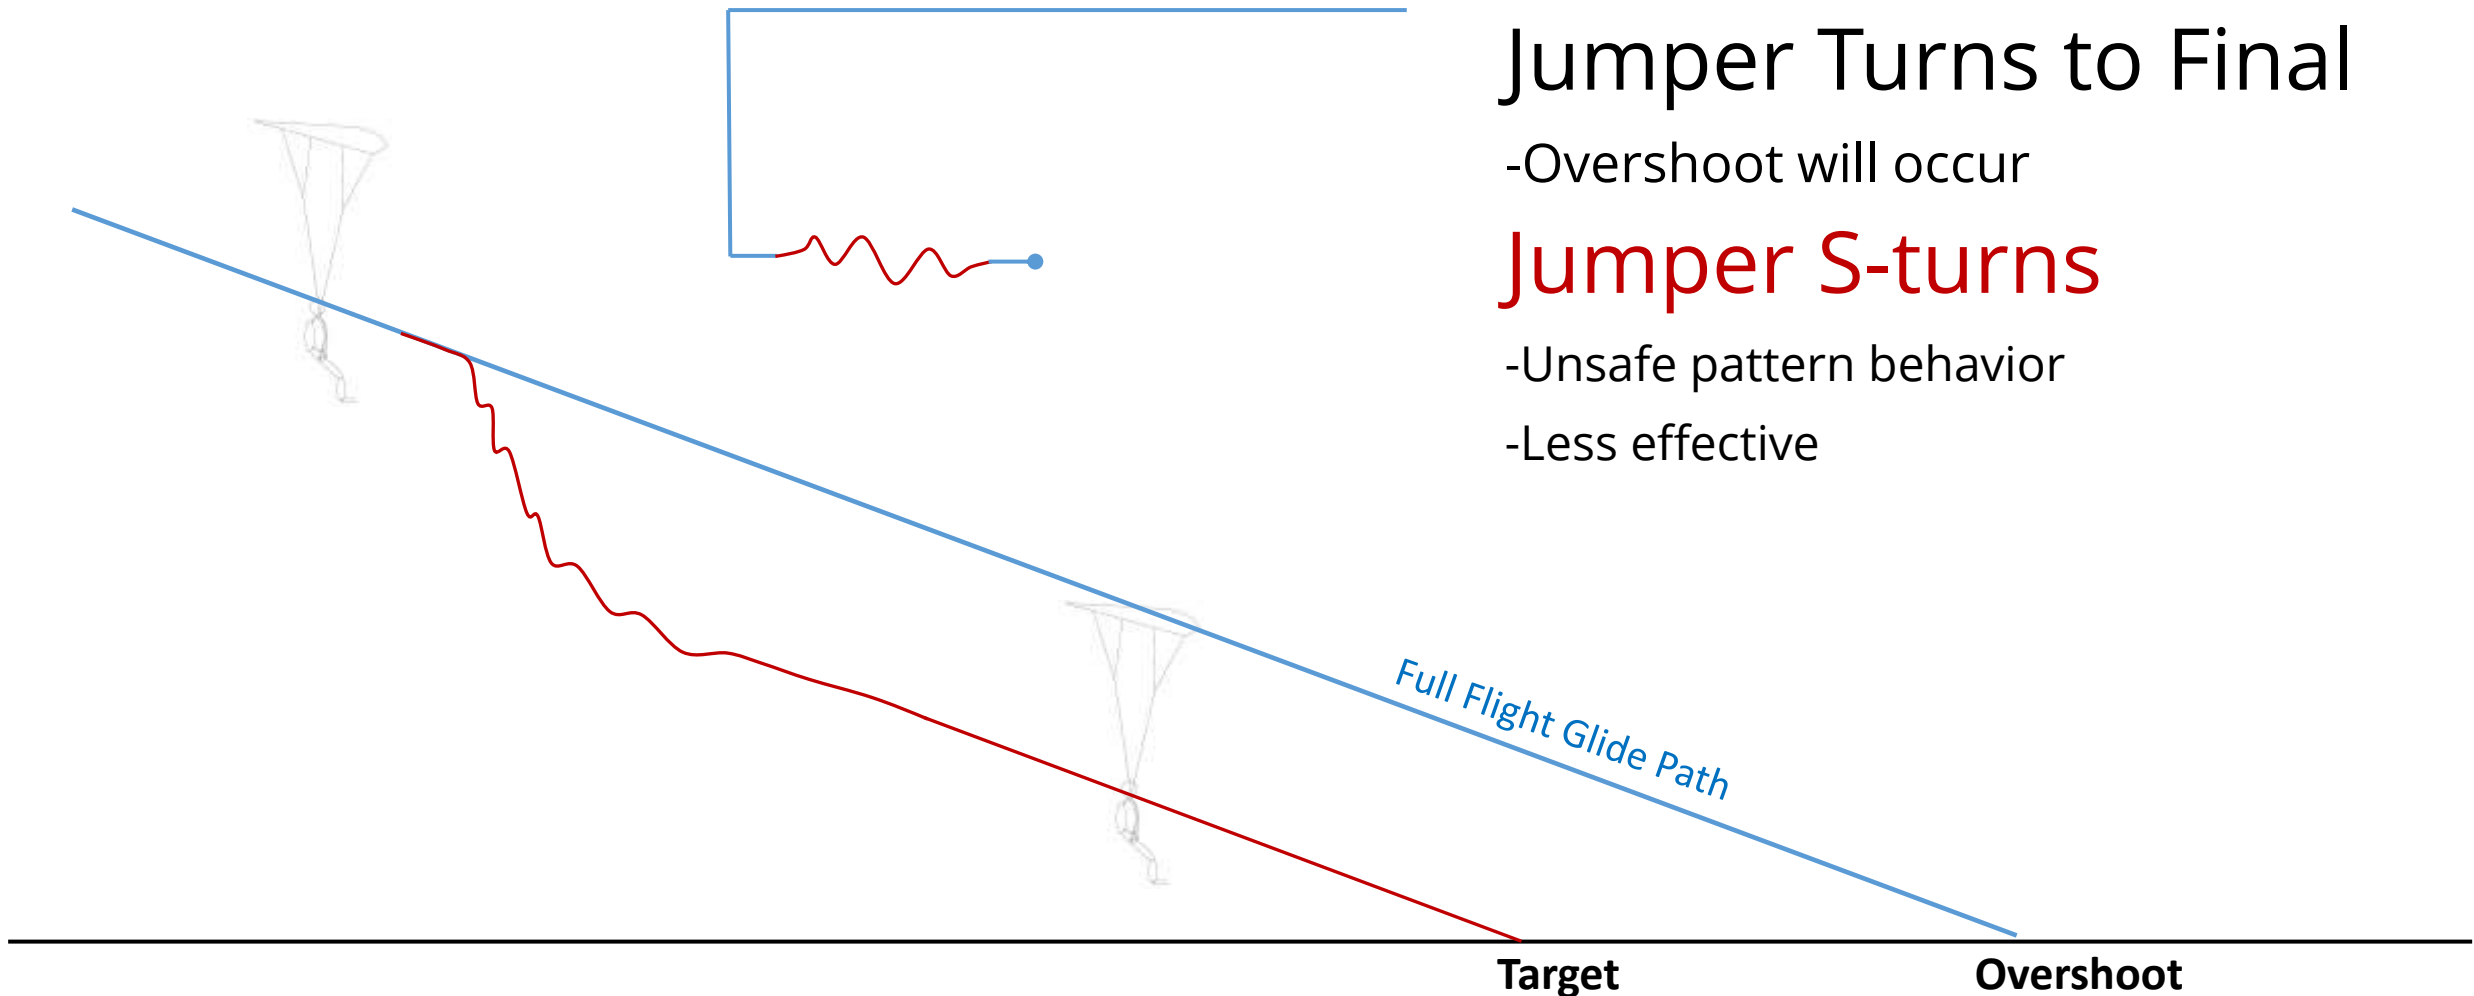

Accuracy Technique

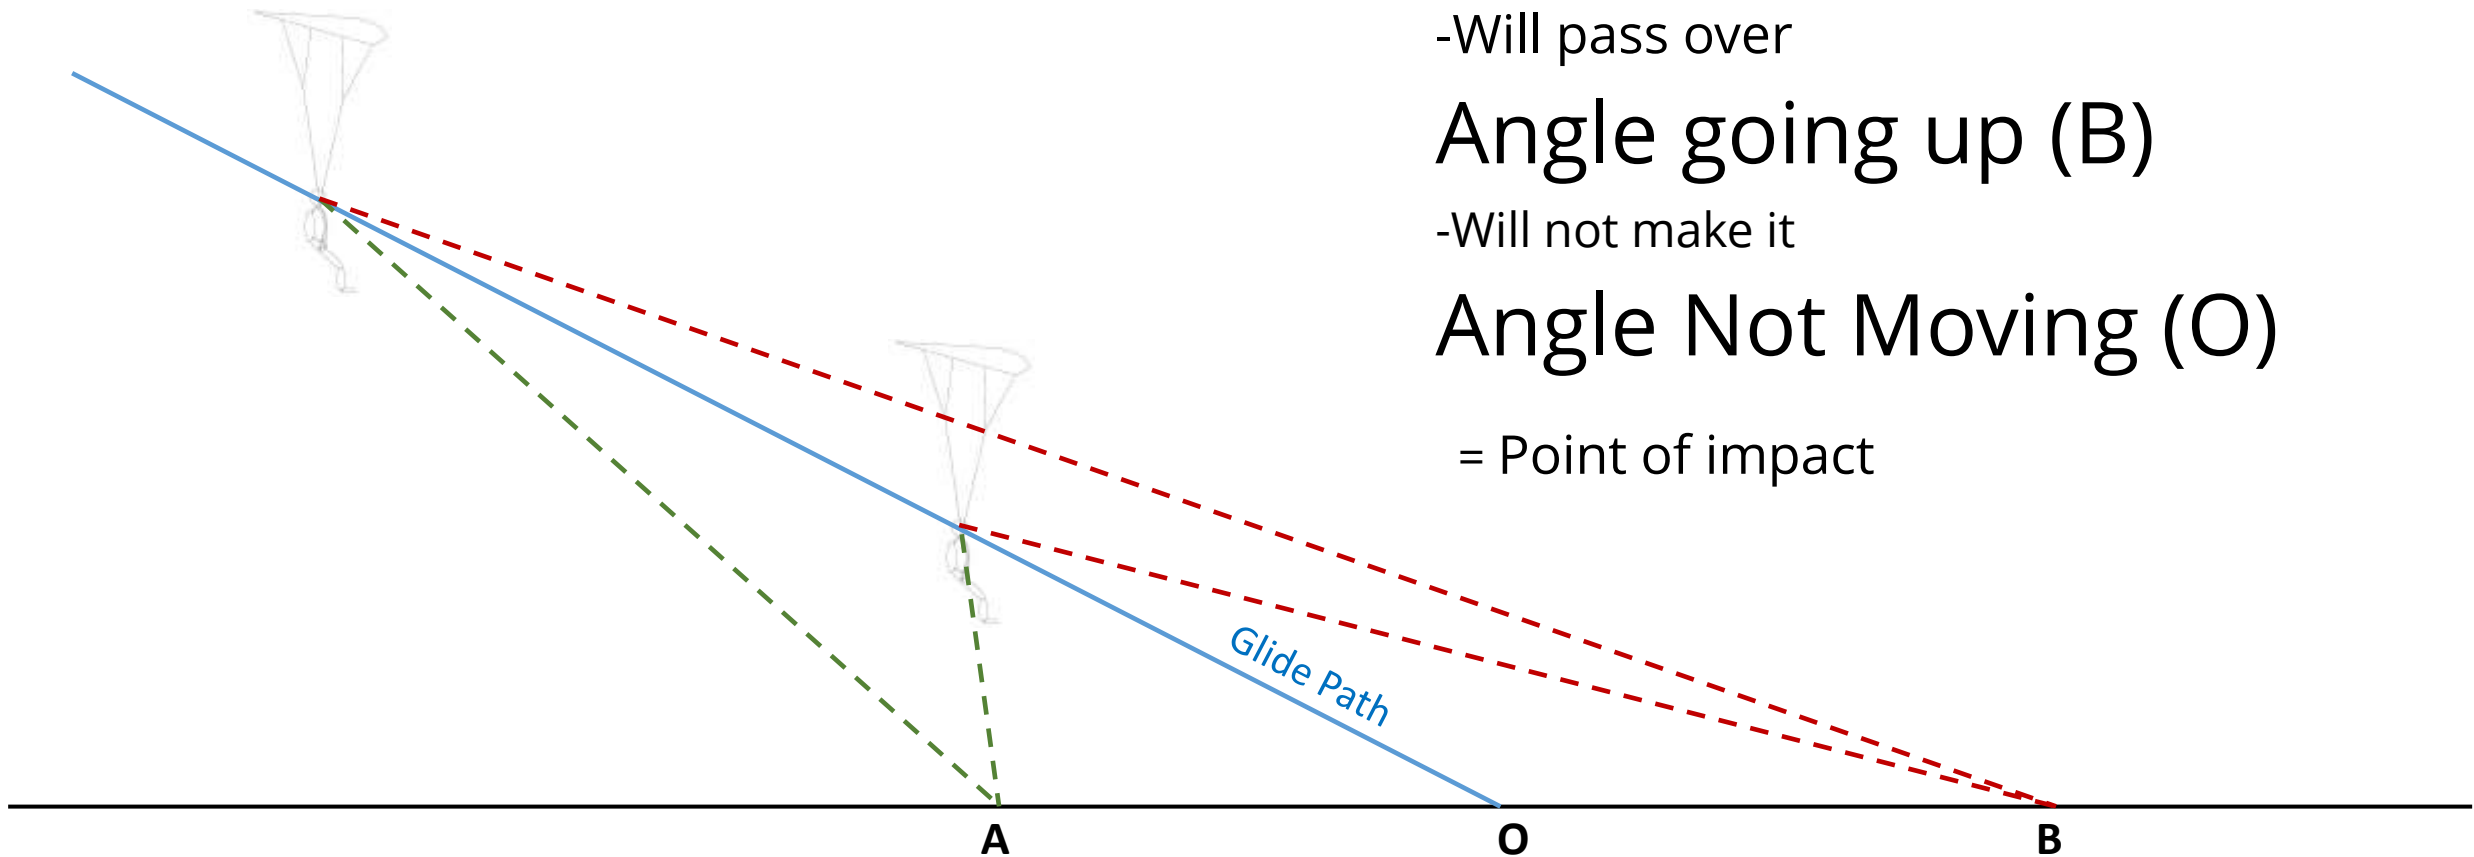

Angle going down (A)

-Will pass over

Angle going up (B)

-Will not make it


Angle Not Moving (O)

= Point of impact



Glide Modulation on Final: Land at A

1. Set up to overshoot!

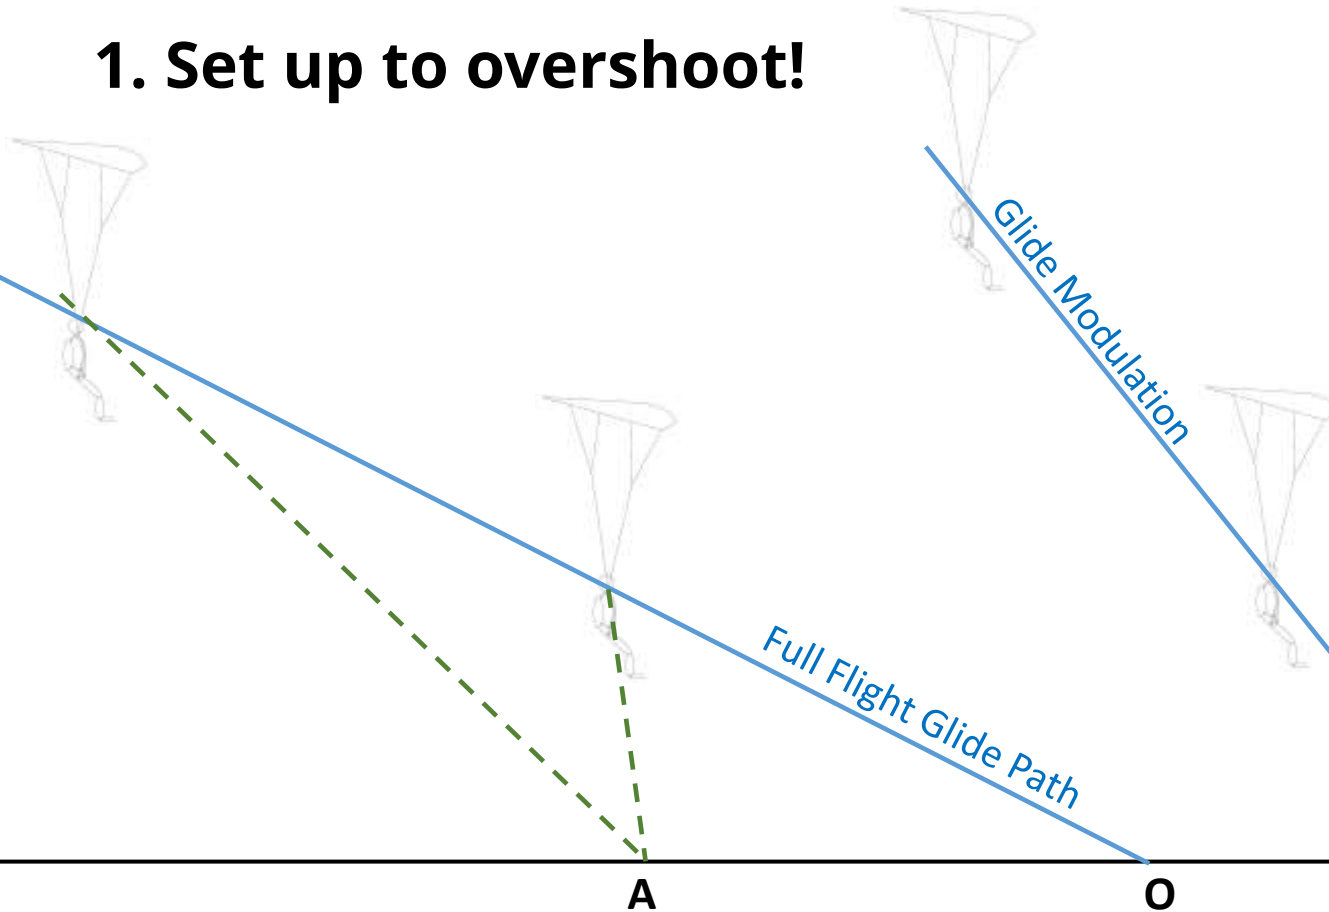


2. Use Glide Modulation

Undershoot slightly

Recover above 25 m

Flare normally

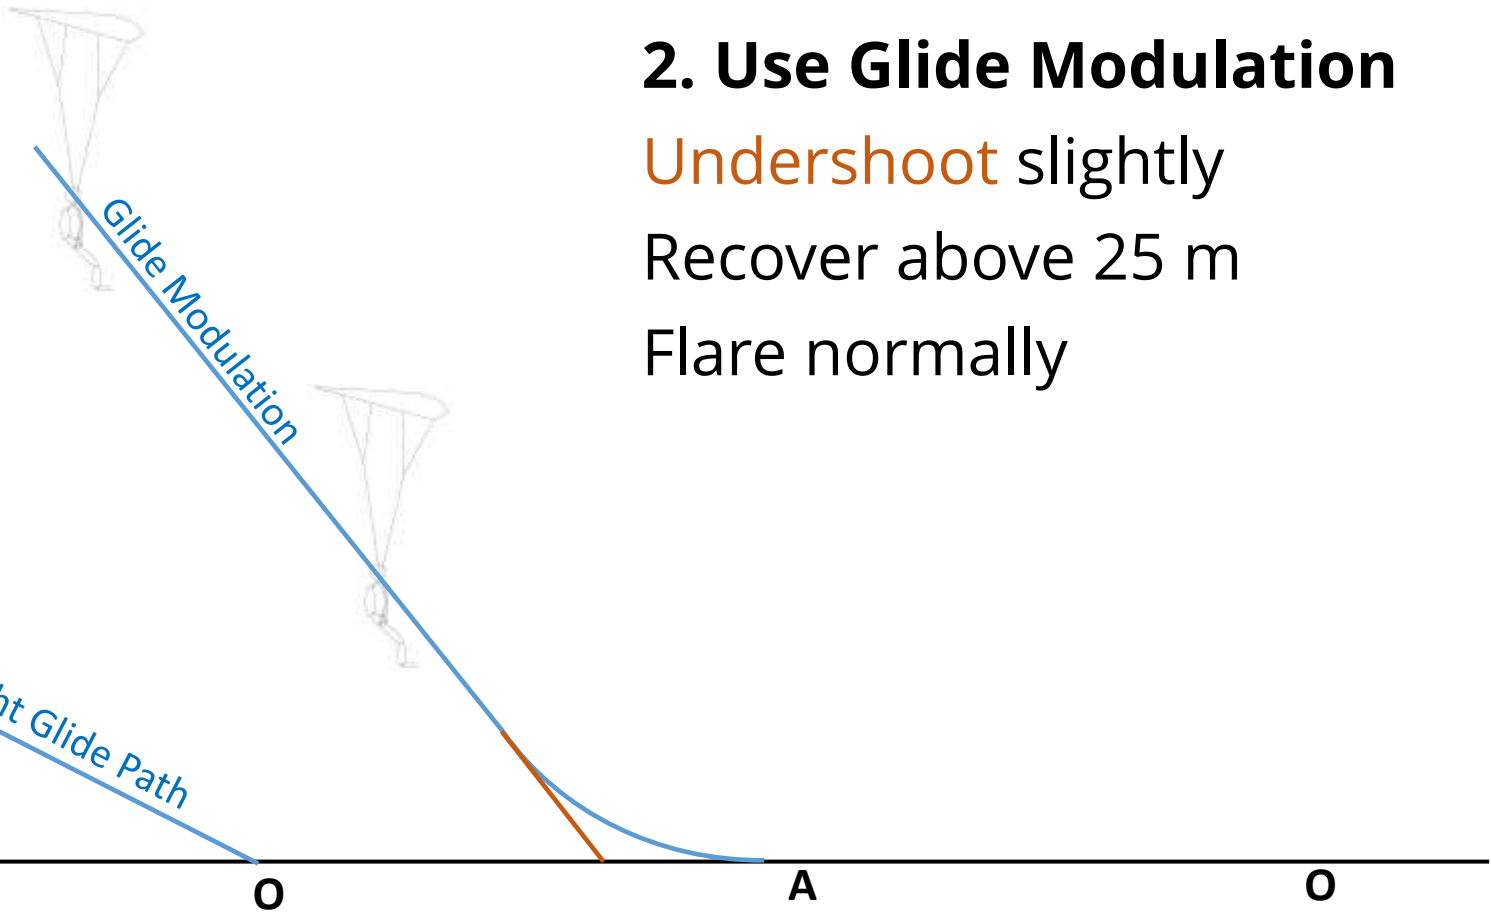



Questions

We are happy to assist